


FIBER

844 G

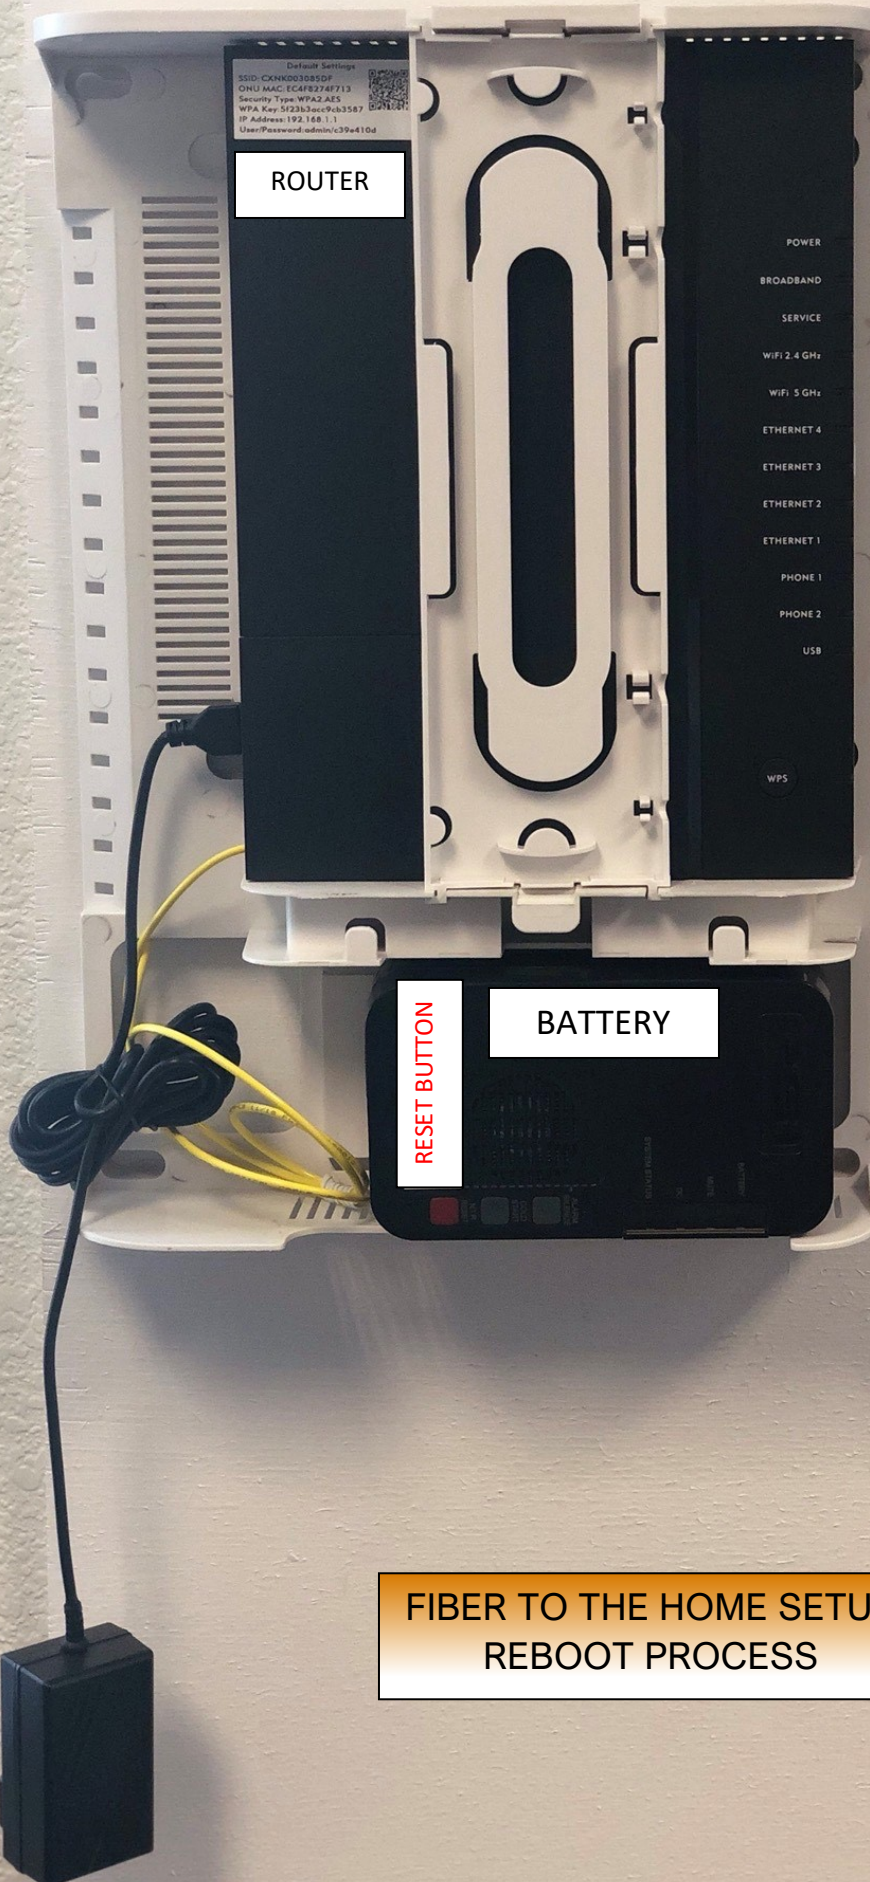

ROUTER

BATTERY

RESET BUTTON

#### STEP 1

Determine if you have battery backup installed

If you have one, go to STEP 2;  
otherwise, go to STEP 3

#### STEP 2

Locate RED reset button

Press and hold red reset button for  
three seconds.

#### STEP 3

Trace the power cable from your router  
and unplug from power supply

Plug back in after 10 seconds

#### STEP 4

After the reboot, you should see  
following LEDs:

- 1) Power – Solid Green
- 2) Broadband – Solid Green
- 3) Service – Flashing Green

(Other LEDs will also be lit according to  
the service utilization)

FIBER TO THE HOME SETUP  
REBOOT PROCESS